

NOVA LUCE


9009135

1



Turn off the general switch

2

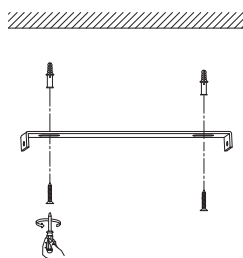


Drill holes & apply plastic anchors
With screws

3




Connect the wires

4

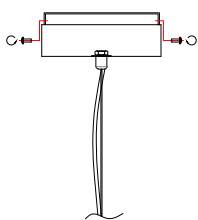


Apply the side screws

5

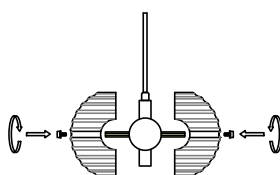

Apply the remaining part
& The side screws

6

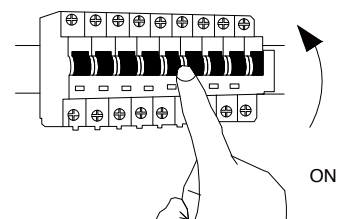

Turn on the general switch

