



NOVA LUCE


9186714

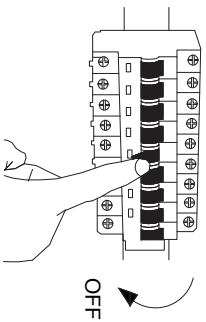


1. Turn off the general switch

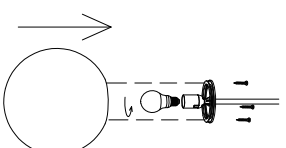


2. By rotating, apply the acrylic

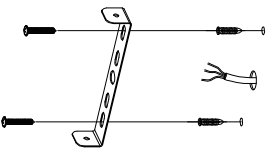


3. Align, mark and drill holes
To apply the screws

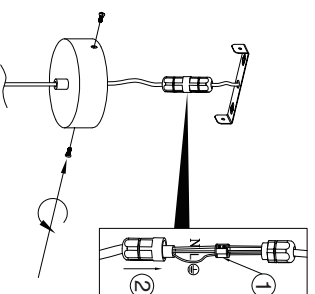

4. Connect the wires

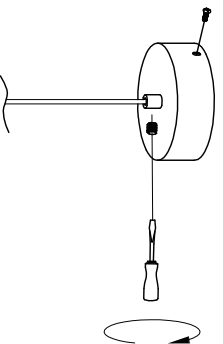

5. Apply the side screws

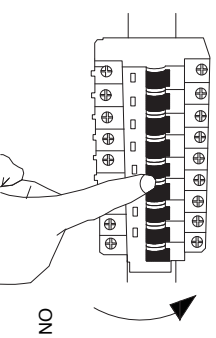

6. Turn on the general switch

