


# NOVA LUCE


9186903 9186904

1

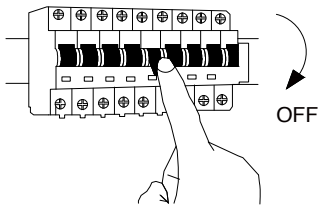


Turn off the general switch

2

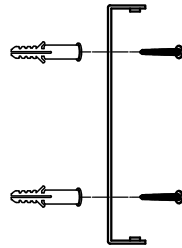


Drill holes & apply plastic anchors  
With screws

3

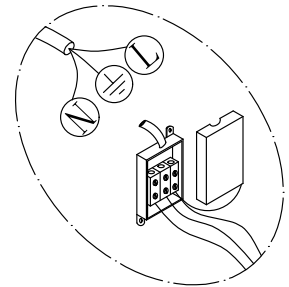


Connect wires

4

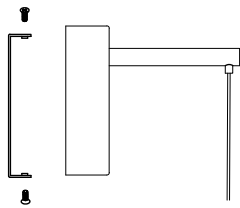

Apply the side screws

5

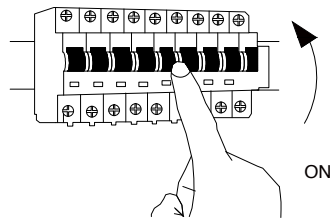

Turn on the general switch

