


NOVA LUCE


9620150

1

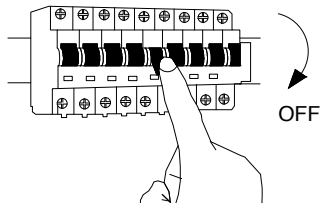


Turn off the general switch

2

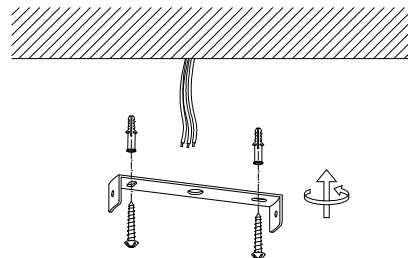


Drill holes
& Apply plastic anchors with screws

3

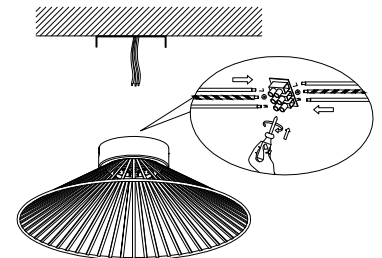


Connect the wires

4

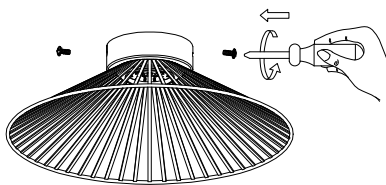


Apply the side screws

5

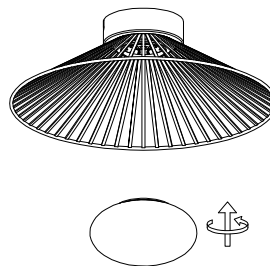

Apply the glass in to place

6

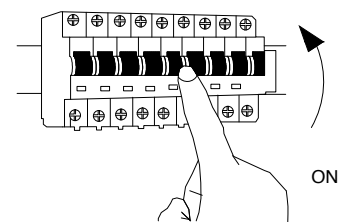

Turn on the general switch

