


NOVA LUCE


9620156

1

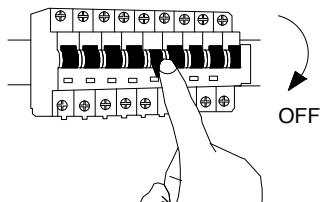


Turn off the general switch

2

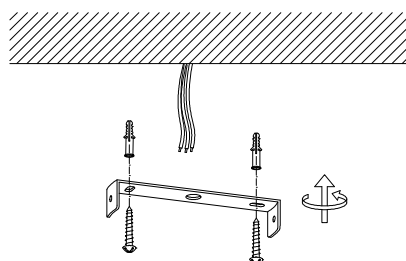


Drill holes
Apply plastic anchors with screws

3

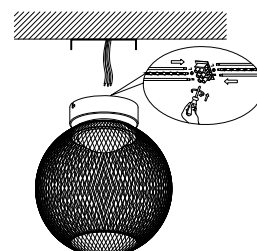


Connect the wires

4

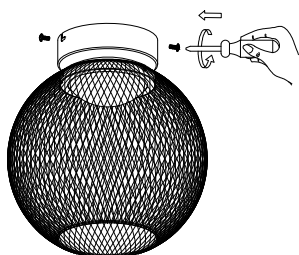

Tie up side screws
to make it stable

5

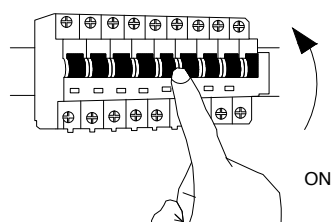

Turn on the general switch

